


28.Trailer Hitch


A: REMOVAL

- 1) Remove the spare tire hoist. <Ref. to WT-14, REMOVAL, Spare Tire Hoist.>
- 2) Remove the bolt, and then detach the main frame.

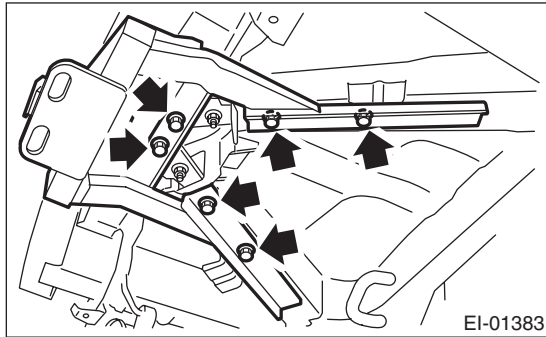

CAUTION:
The trailer hitch main frame is heavy. Be careful when removing.

- 3) Remove the bolts, and then remove the center frame.

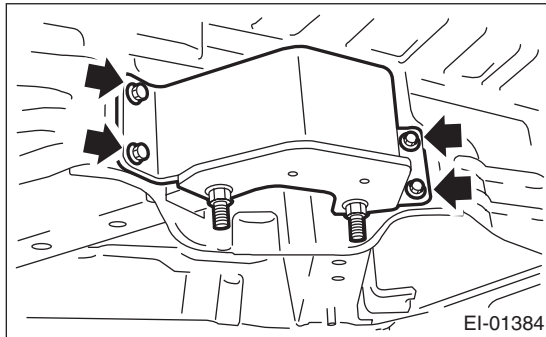

- 4) Remove the side frame from the vehicle.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “**COMPONENT**” of “**General Description**”.

<Ref. to EI-17, TRAILER HITCH, COMPONENT, General Description.>

EXTERIOR BODY PANELS



| | Page |
|------------------------------|------|
| 1. General Description | 2 |
| 2. Front Hood | 12 |
| 3. Front Fender | 15 |
| 4. Front Door | 16 |
| 5. Front Sealing Cover | 18 |
| 6. Rear Door | 19 |
| 7. Rear Sealing Cover | 21 |
| 8. Rear Gate | 22 |